



Auto-matching & Troubleshooting

Press down the two buttons simultaneously for 5 seconds to start auto-matching

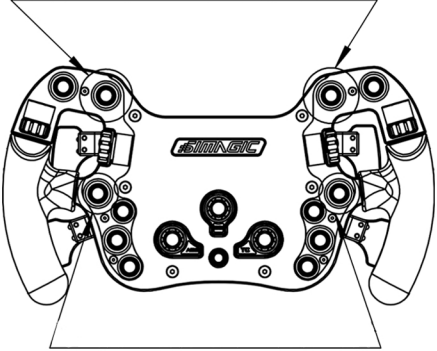


Press down the two buttons simultaneously for 5 seconds to enter Troubleshooting mode. When the mode is on, the lights keep switching to indicate a button or rotary is in working conditions or not.

Clutch Calibration Mode

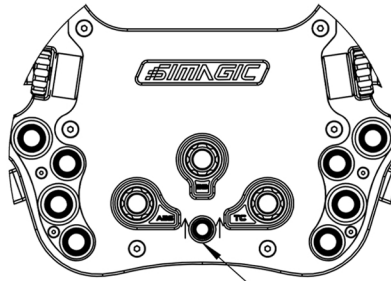

Push upwards the 7-way position switch for 5 seconds to enter Clutch Calibration Mode


Factory Reset

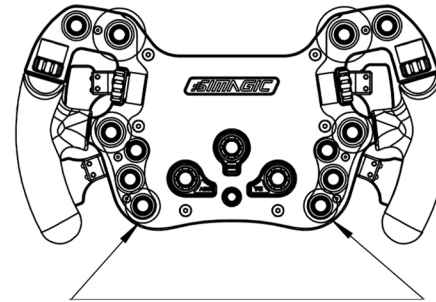

Press down the two buttons simultaneously for 5 seconds to reset to factory settings (only for the wheel)

Paddle adjustments


Paddles are adjustable horizontally and vertically

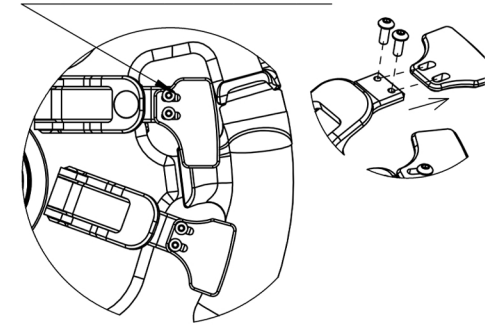

Steering Wheel X 1




USB-C X 1

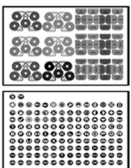

Button Stickers X2


Connection between Steering Wheels and Wheelbases

The SIMAGIC Quick Release has 6 ball bearings on the upside, with 4 downside

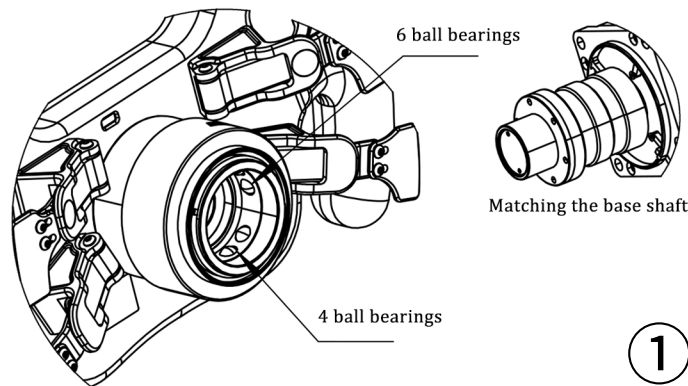


1

If auto-matching does not work, use an included USB-C cable to connect the steering wheel to the base from backside.

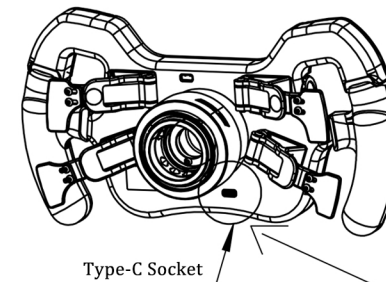

Type-C Socket

Connect to the base from the right side

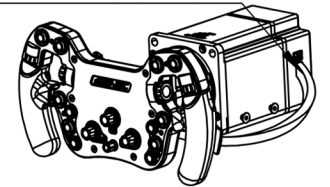

2