



Auto-matching & Troubleshooting

Press down the two buttons simultaneously for 5 seconds to start auto-matching

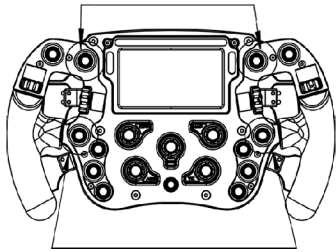


Press down the two buttons simultaneously for 5 seconds to enter Troubleshooting mode. When the mode is on, the lights keep switching to indicate a button or rotary is in working conditions or not.

Clutch Calibration Mode

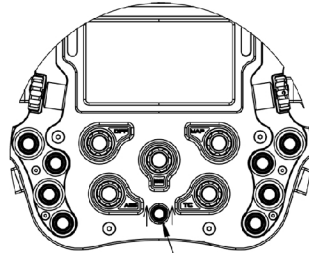

Push upwards the 7-way multi-position switch for 5 seconds to enter Clutch Calibration Mode


Factory Reset

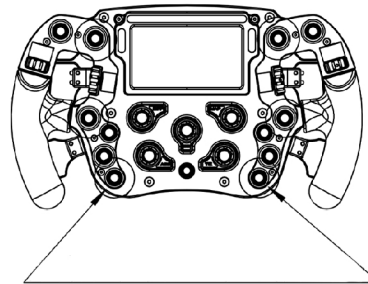


Press down the two buttons simultaneously for 5 seconds to reset to factory settings (only for the wheel)

Paddle Adjustments

Paddles are adjustable horizontally and vertically

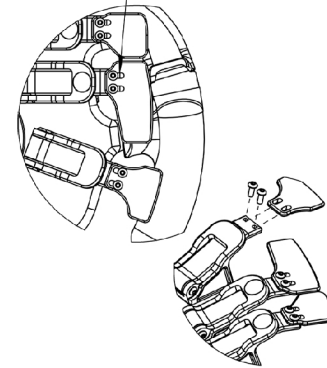

Switch Instrument Display

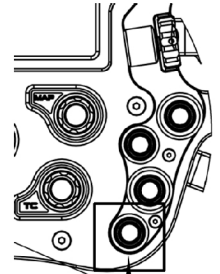

Click on this button to switch between instrument display pages

 
Connection between Steering Wheels and Wheelbases



Steering Wheel X 1




USB-C X 1



Button Stickers X2

The SIMAGIC Quick Release has 6 ball bearings on the upside, with 4 downside

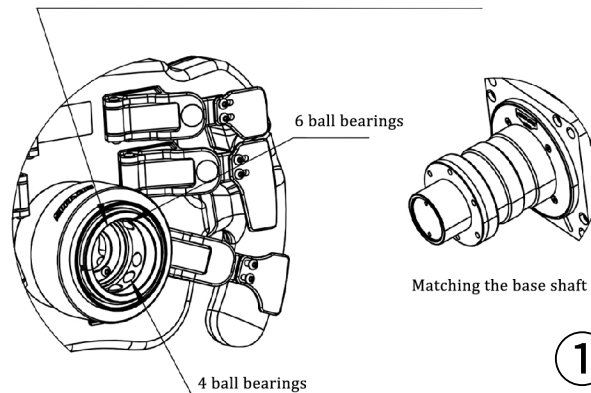

If auto-matching does not work, use an included USB-C cable to connect the steering wheel to the base from backside.

