



C-P1000离合 快速指南


WWW.SIMAGIC.COM

1.0 配件清单


- | | |
|---|--|
|  全牙杯头M6-16*4 |  红色弹簧*1 |
|  六角扳手*1(5mm) |  黄色弹簧*1 |

2.0 拆下刹车踏板

2.1 将刹车传感器的接线端子拔出 (红线、黄线)

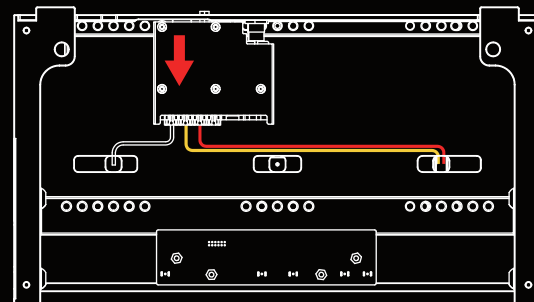


2.2 松开刹车模块连接底板的四颗螺钉

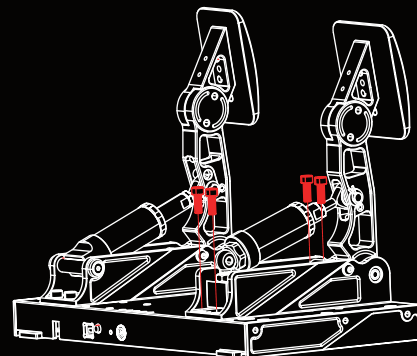


3.0 安装离合、刹车踏板


3.1 将刹车模块端子线及离合模块端子线穿过线孔

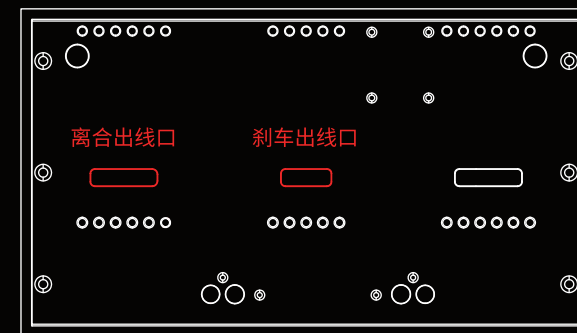

3.2 锁紧刹车模块及离合模块连接底板的四颗螺钉

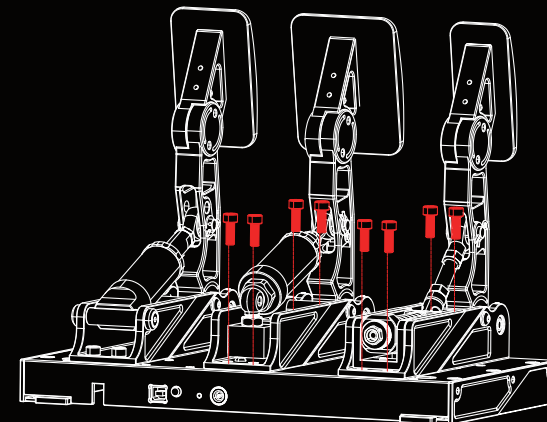


3.3 将刹车模块接线端子(红线、黄线)及离合模块接线端子(蓝线)插入对应位置

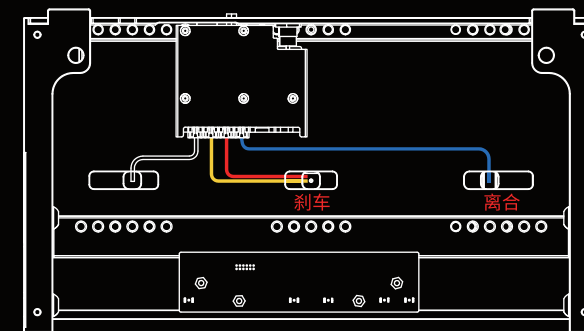

4.0 离合踏板调节及更换弹簧

黄色弹簧→软 蓝色弹簧→中 红色弹簧→硬

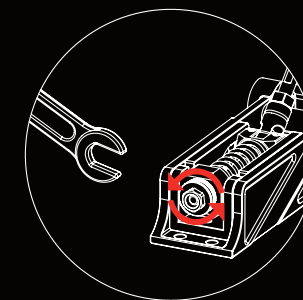

4.1 旋转尾部紧固螺丝可微调弹簧力度

4.2 更换离合弹簧

- ① 松开尾部紧固螺丝
- ② 把尾部固定装置向前并向上抬起, 可拆卸并更换弹簧



SIMAGIC

C-P1000 CLUTCH QUICK GUIDE


WWW.SIMAGIC.COM

1.0 List of accessories


- Fully-Threaded Screw M6-16*4
- Red Spring*1
- Allen Key*1(5mm)
- Yellow Spring*1

2.0 Uninstall the brake pedal

2.0 Unplug the brake connection cable from the control box (red & yellow cable)

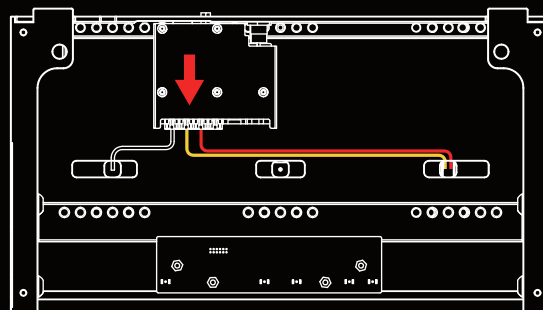


2.1 Remove the four screws on the brake module

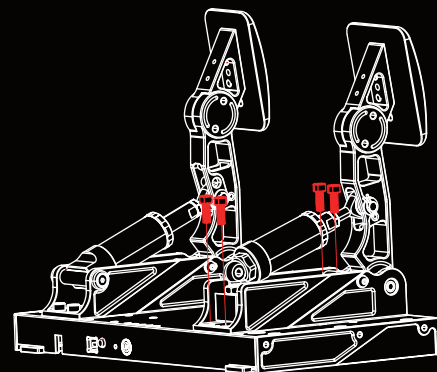


3.0 Install the clutch & brake pedals


3.1 Run the connection cables for both the clutch and brake module through their respective slots

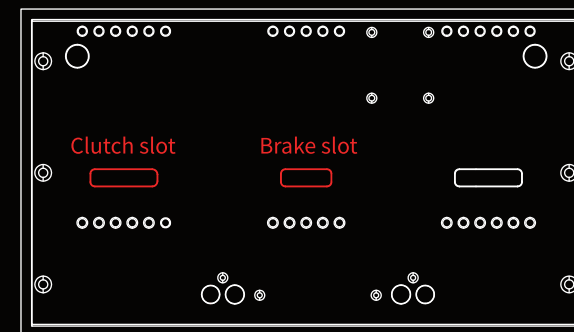


3.2 Tighten the four screws on both the clutch and the brake module

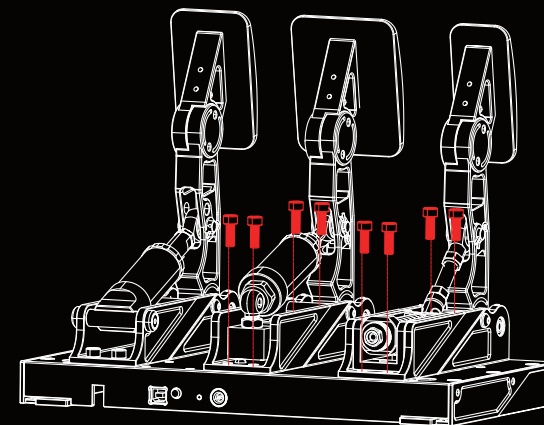

3.3 Connect the connection cable for both the clutch (blue) and brake module (red & yellow) into their respective ports on the control box

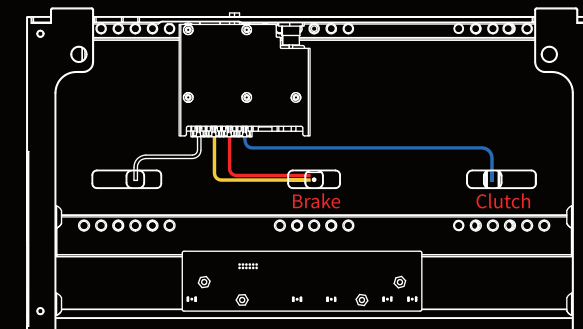

4.0 Clutch adjustment and spring replacement

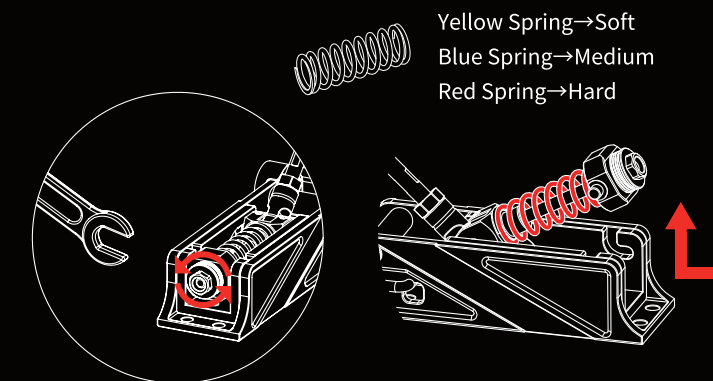

4.1 Rotate the rear adjustable screw to fine tune the spring force

4.2 Replace the Clutch spring

- Loosen the rear adjustable screw
- Push the tail end forward and upwards to remove and replace the spring