

# SIMAGIC GT<sup>NEO</sup> 方向盘 快速指南

## 1.0 配件清单

六角扳手\*1(2mm)


USB type-c线缆\*1

方向盘\*1

按键/旋钮功能贴纸\*2

## 2.0 方向盘快捷功能键


### 2.1 离合校准模式

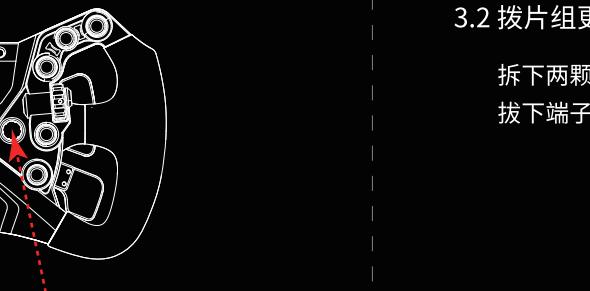

七向开关同时向上推5秒进入离合校准模式,  
将离合拨片各按到底一次(可同时按下)后按任意按键  
即可完成离合校准


### 2.2 恢复出厂设置

同时按下5秒恢复出厂设置  
(仅方向盘)

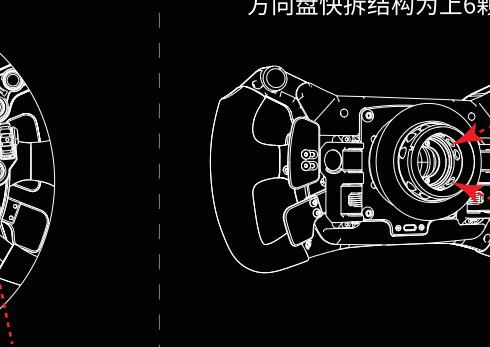


## 3.0 方向盘调节

### 3.1 拨片调节

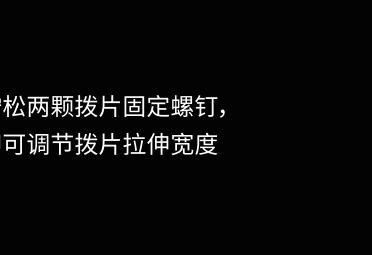

拧松两颗拨片固定螺钉,  
即可调节拨片拉伸宽度


### 3.2 拨片组更换

 


拆下两颗螺钉,  
拔下端子即可更换拨片组

## 4.0 方向盘与基座连接


### 4.1 与基座连接

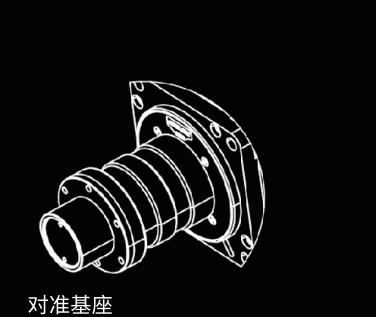


方向盘快拆结构为上6颗钢珠,下4颗钢珠

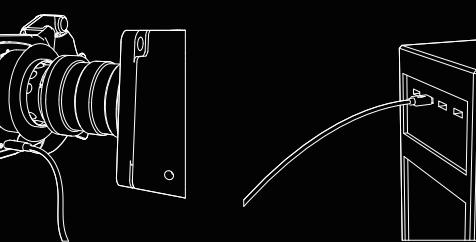


6颗钢珠  
4颗钢珠  
对准基座

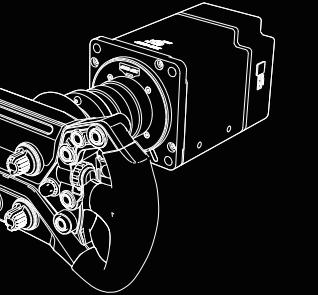

连接基座时,将方向盘插入基座  
并按下对频按键进行连接

 


通过SimPro Manager 进行固件更新

 

在PC端安装SimPro Manager 进行方向盘设置

## 软件及应用

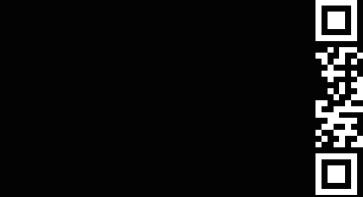


# SIMAGIC GT<sup>NEO</sup> Wheel Quick Guide


## 1.0 Accessories list



 
Allen key\*1 (2mm)



USB type-c cable\*1

 


Steering wheel\*1

 

Button/rotary encoders functionality stickers\*2

## 2.0 Steering wheel function shortcuts


### 2.1 Clutch calibration mode

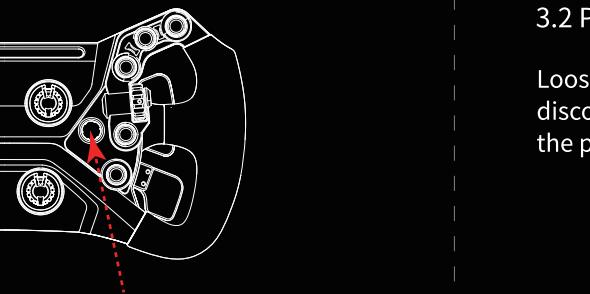

Push and hold both 7-way switches upwards for 5 seconds to enter Clutch Calibration mode, then press both clutches all the way down (then press any button) to complete the calibration (both clutches can be pressed simultaneously)


### 2.2 Factory reset

Press and hold the two indicated buttons simultaneously for 5 seconds to reset the wheel back to factory default settings

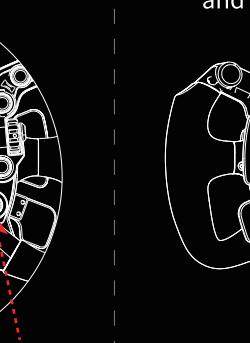


## 3.0 Steering wheel adjustments

### 3.1 Paddle adjustments

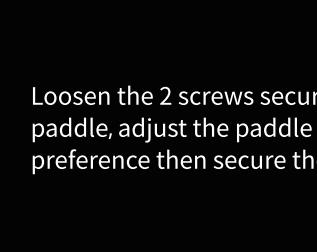


Loosen the 2 screws securing the paddle, adjust the paddle to your preference then secure the 2 screws

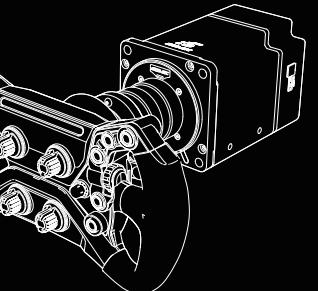

To pair the wheel to the wheelbase, attach the wheel and press the indicated buttons below to sync the frequency

Press both buttons simultaneously for 5 seconds to activate auto pairing mode

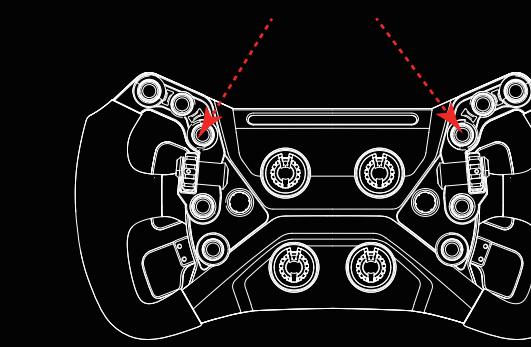

### 3.2 Paddle module replacement



Loosen the 2 screws, then disconnect the cable to replace the paddle module






## 4.0 Steering wheel and wheelbase connection

### 4.1 Wheelbase connection


The quick release assembly contains 6 steel balls on the top half, and 4 steel balls on the bottom half

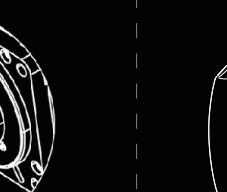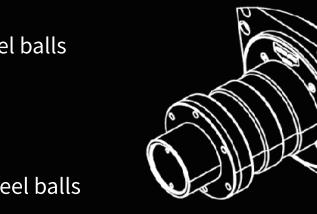


Line up with the wheelbase

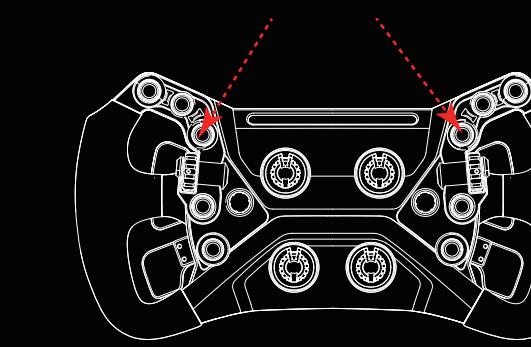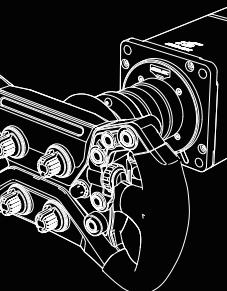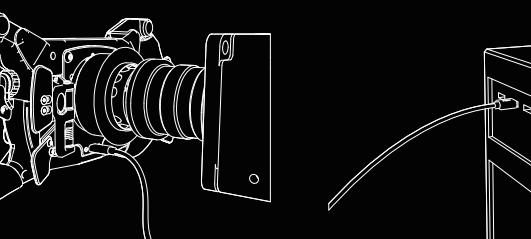

 
If there's no response when using the auto pairing mode, attach the included USB Type-C cable from the socket at the back of the wheel to the socket on the PC to manually sync the frequency (Please unplug the cable before driving in wireless mode )




Update the firmware through SimPro Manager

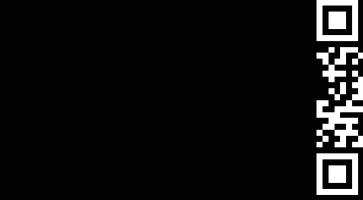

 
Install SimPro Manager on the PC to setup the wheel




Update the firmware through SimPro Manager

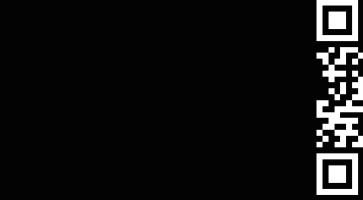

 
Install SimPro Manager on the PC to setup the wheel




Update the firmware through SimPro Manager

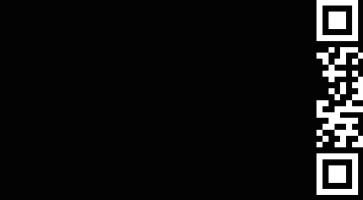

 Install SimPro Manager on the PC to setup the wheel



Update the firmware through SimPro Manager

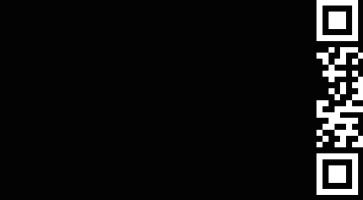

Install SimPro Manager on the PC to setup the wheel