

# SIMANGIC

## P-HTS液压油门 快速指南



### 1.0 配件清单

石墨铜套\*1

六角扳手\*1(3mm)


### 2.0 拆卸油门缸体

拆卸两侧的固定螺钉

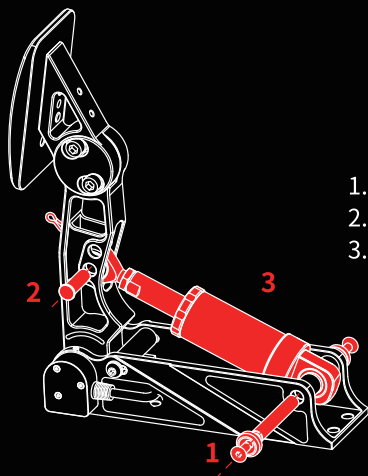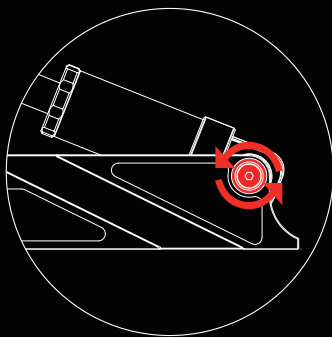


1. 取出光轴
2. 取出插销
3. 取出胶桶


### 3.0 安装P-HTS

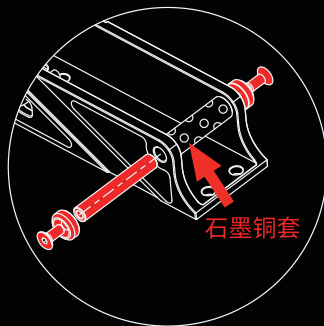


放入石墨铜套, 将光轴  
穿过石墨铜套里

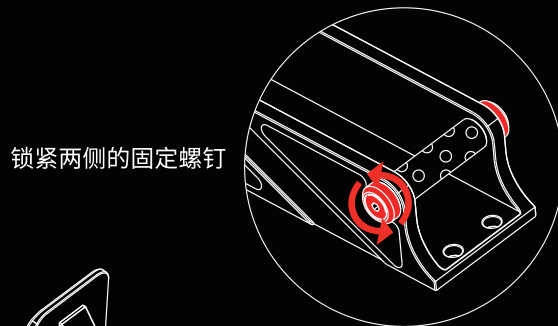

锁紧两侧的固定螺钉

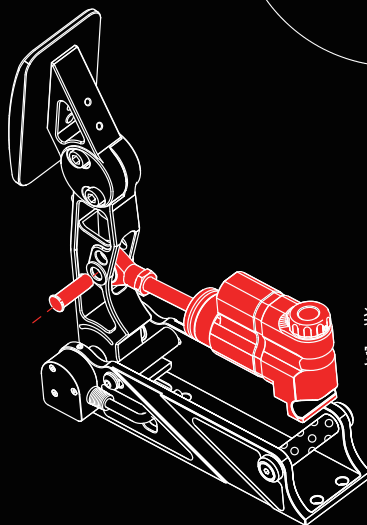


装上P-HTS, 将插销  
穿过孔位

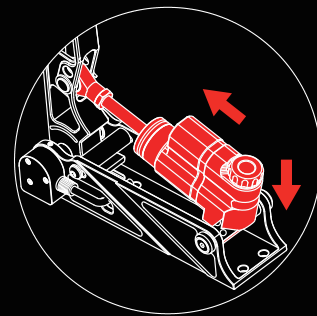

将P-HTS先往前推,  
再往下放入卡位,  
即可完成安装

### 4.0 油门阻尼说明

油门阻尼调节器数值  
越大, 脚感越重

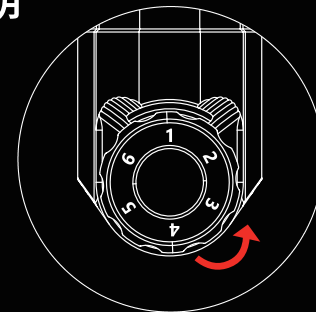

注意: 使用该产品需要在PC端下载并安装Simpro Manager进行设置

### 软件及应用



在PC端安装  
SimPro Manager  
进行设置



产品教程  
(更多相关资料扫码查看)





## P-HTS Hydraulic Throttle Cylinder Quick Guide

### 1.0 Accessories list

- Graphite copper rod\*1
- Allen key\*1 (3mm)


### 2.0 Disassembling the throttle cylinder

Loosen the securing screws on both sides

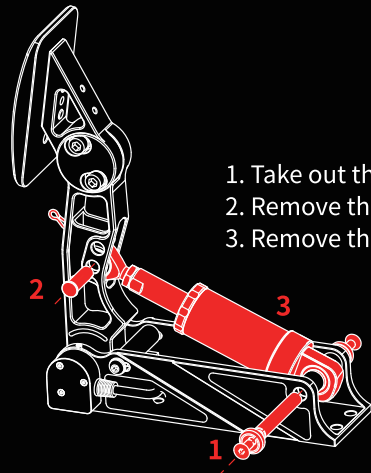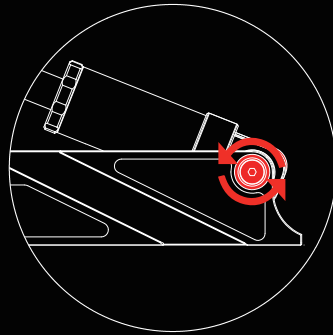


1. Take out the support sleeve
2. Remove the Clevis pin
3. Remove the cylinder


### 3.0 P-HTS Installation

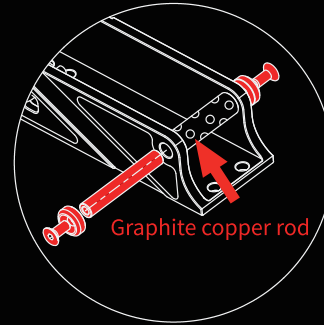


Insert the graphite copper rod, then insert the support sleeve through the rod

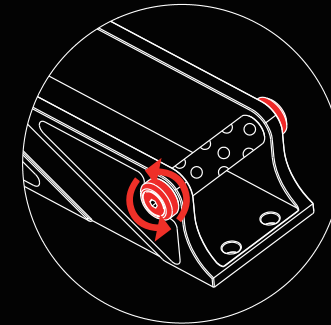

Secure the screws on both sides

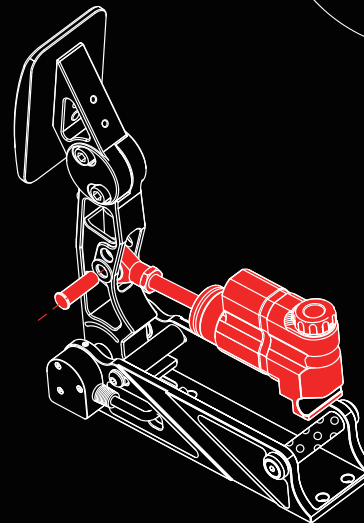


Install the P-HTS cylinder and insert the clevis pin through the front slot

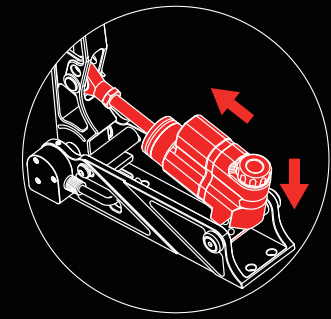

Push the P-HTS cylinder forward, then slot the assembly into the rod to complete the installation

### 4.0 Throttle damper instructions

Higher damper values produce a heavier feeling pedal

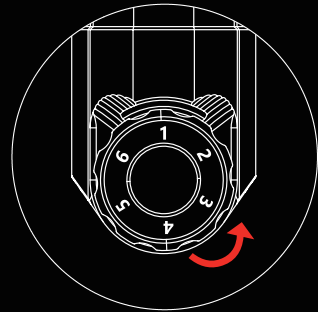

Note: A complete SimPro Manager installation and setup on PC is required

### Software & applications



Install SimPro Manager on the PC to setup



Product Tutorial (Scan the QR code to view more related information)