

SIMAGIC


TB-RS 液压手刹 快速指南

1.0 配件清单


- 盘头螺钉M6-12*3
- 盘头螺钉M6-16*3
- M6防松螺母*3
- 薄10号开口扳手*1
- 六角扳手*2(3mm/4mm)

用于安装P-HPR线性电子辅助模块配件清单 (P-HPR需单独购买):


- 盘头螺钉M4-6*3
- 连接板*1
- 六角扳手*1(2.5mm)

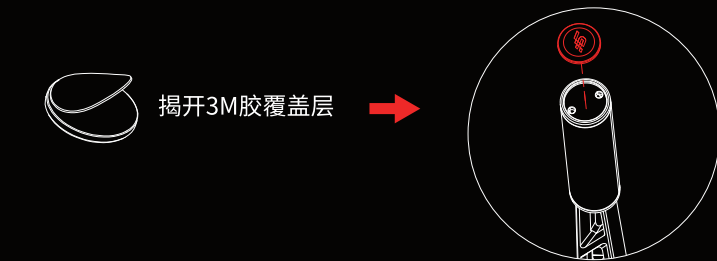

2.0 安装

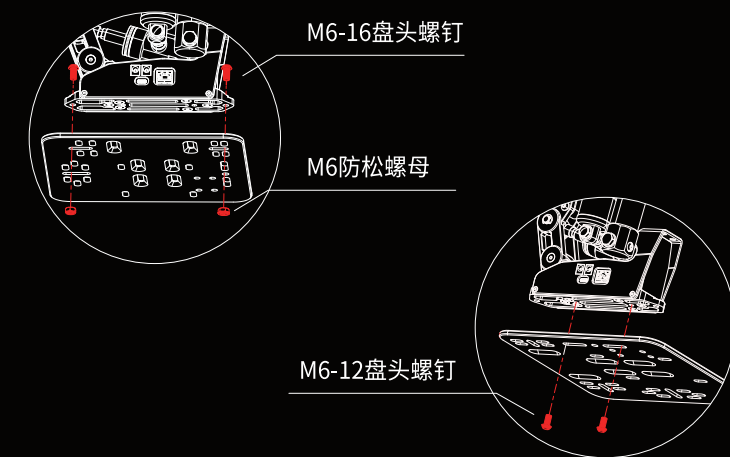


3.0 接线口

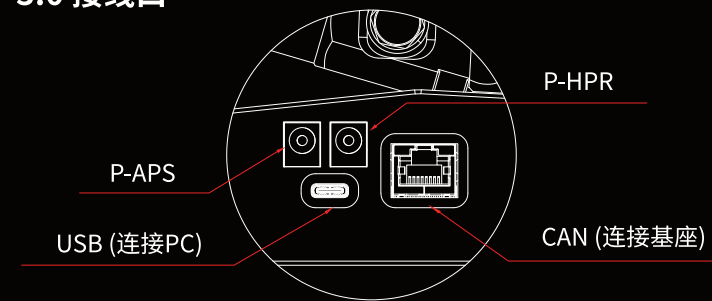


4.0 更换胶簧

1. 拧开胶桶盖
2. 更换胶簧
3. 拧上胶桶盖

注意: 胶桶中未放满胶簧时请勿拉动手刹手柄

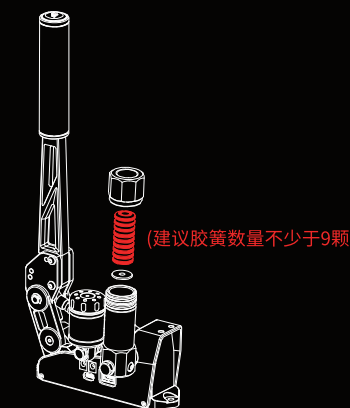


5.0 手柄调节



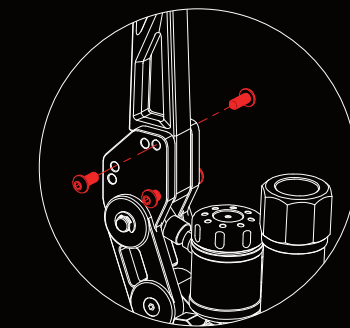


1. 拆卸上方两颗螺钉
2. 稍松开下方两颗螺钉

6.0 安装方式

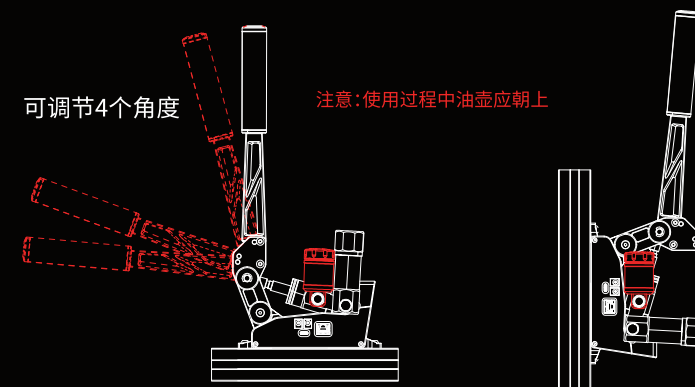

7.0 安装P-HPR线性电子辅助模块

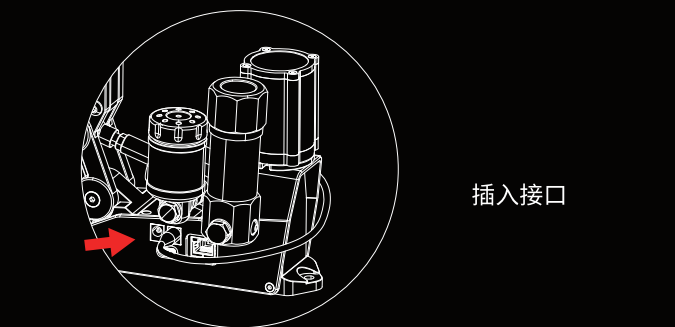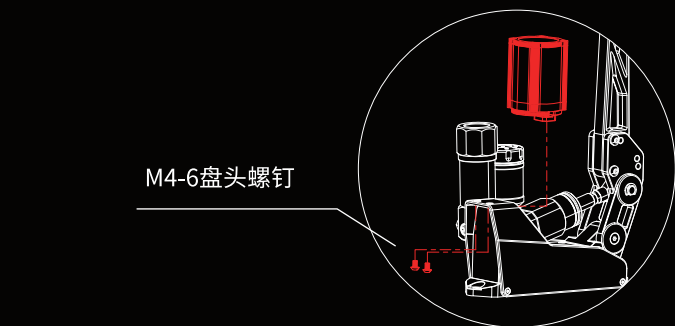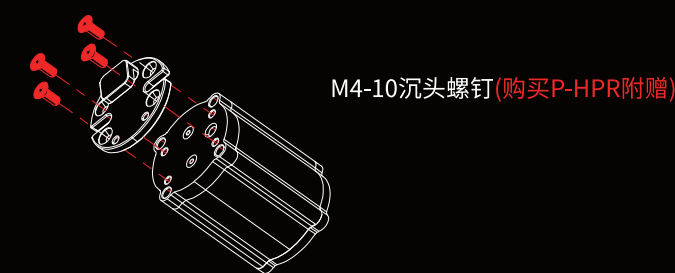

SIMAGIC

TB-RS

HYDRAULIC HANDBRAKE

QUICK GUIDE

1.0 List of accessories


- Truss Head Screw M6-12*3
- Thin 10mm Open spanner *1
- M6 Lock Nut*3
- Truss Head Screw M6-16*3
- Allen Key*1(4mm)

P-HPR linear haptic motor module installation checklist (requires separate purchase)



- Truss Head Screw M4-6*3
- Connection Plate*1
- Allen Key*1(2.5mm)

2.0 Mounting the HandBrake


1. Top Mounting:

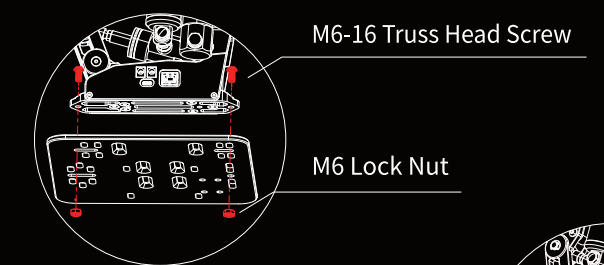

2. Bottom Mounting:

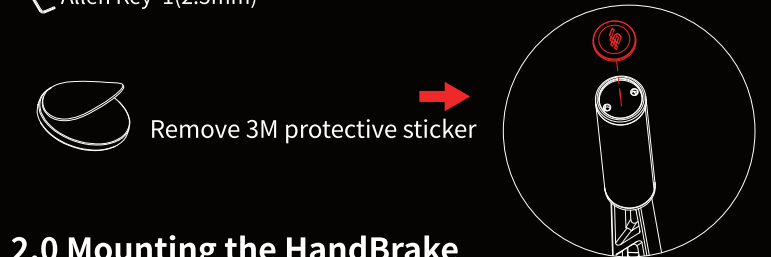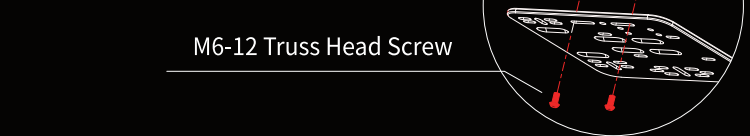


3.0 Connection Ports

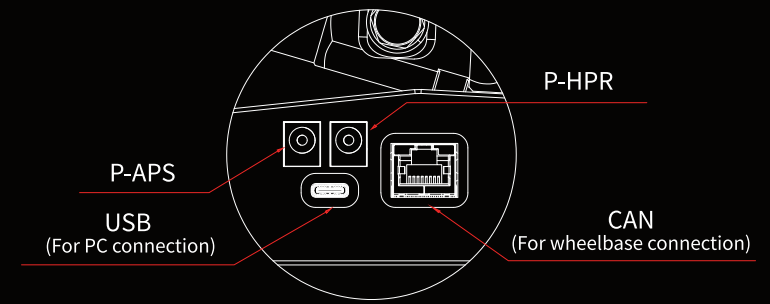


4.0 Elastomer swap

1. Loosen the cylinder cap
2. Swap the elastomer
3. Tighten the cylinder cap

CAUTION: DO NOT pull the handbrake when there's not enough elastomers in the cylinder

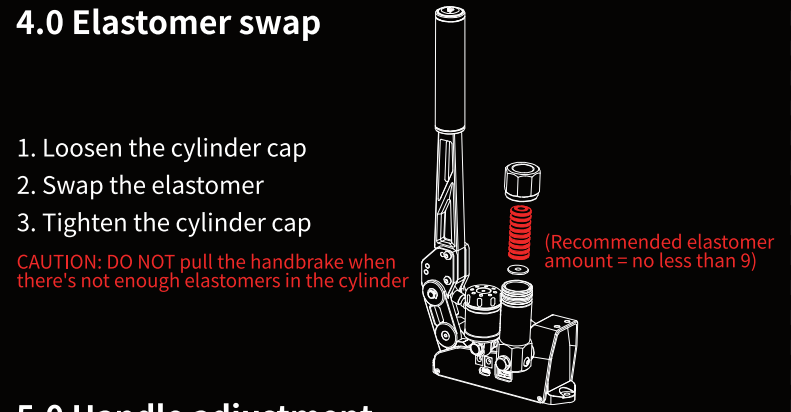


5.0 Handle adjustment

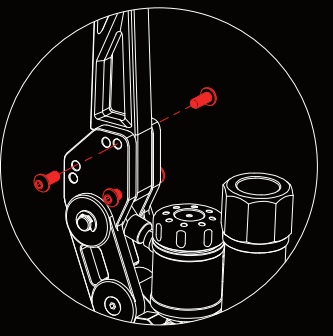


1. Remove the upper 2 screws
2. Slightly loosen the lower 2 screws

6.0 Installation Tips

Adjustable in 4 angles

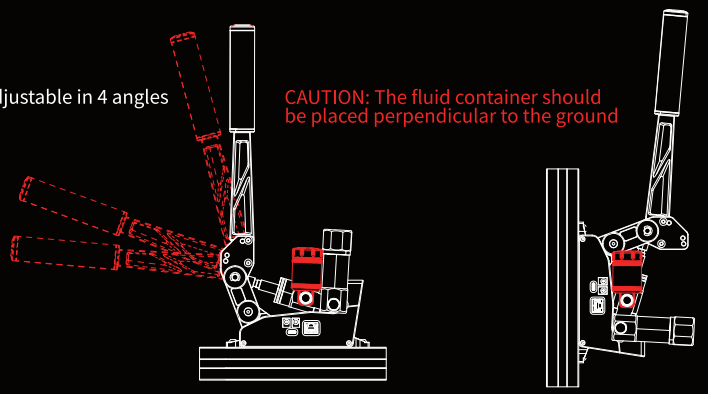

3. Move the handle to the desired position

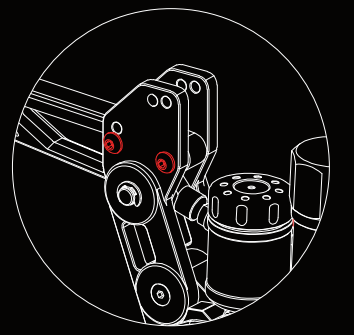


4. Tighten all 4 screws

7.0 Installation of P-HPR linear haptic motor module



M4-6 Truss Head Screw

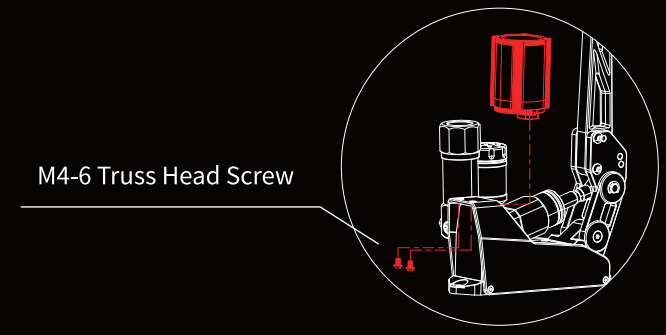

Plug the cable into the socket

