


更换胶体

3 更换胶体



### 转换手刹方向

安装与固定

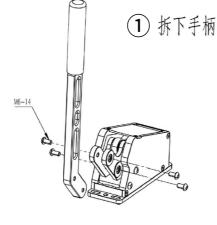


2 调整安装




微调拉杆

B. 型材螺母 M6-40 X4

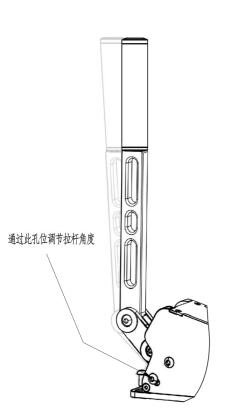

#### 注:此L板可额外购买

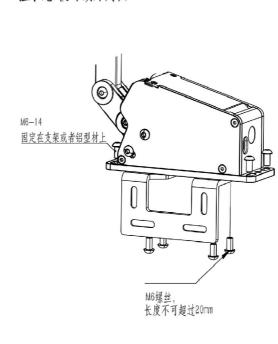


底板




访问 Simagic.com 下载最新驱动, 获取更多使用说明


## TB-1 Handbrake Quick Guide



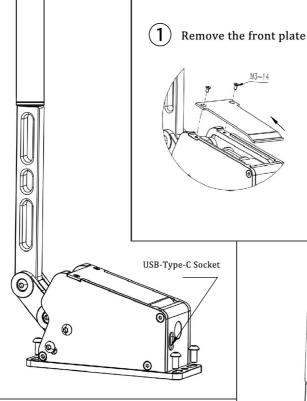

# **Rubber Replacement**

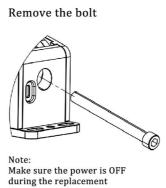


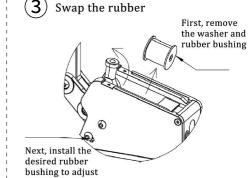

the resistance of the Handbrake

Switching lever position Remove the lever




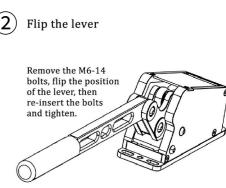


### Adjust the lever

A . Button Head Socket Cap Screw M6-14 X4


B . Roll in T-Nut with Ball Spring M6-40 X4

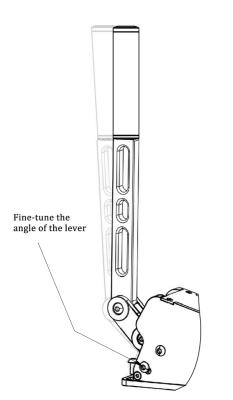

### Mount and Install

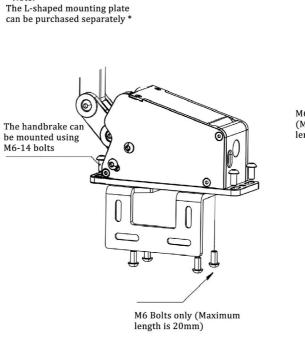

**Bottom View** 

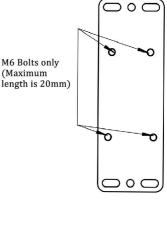

Download the latest Driver and know more about the product at Simagic.com