



刹车配方更换指引

P1000系列



模具弹簧*10



胶桶垫片*3



限位块*3



80橡胶*6



80聚氨酯*7



90聚氨酯*7




胶桶金属垫片*1 (原出厂钢桶内垫片, 本包装不包含此垫片)

3种刹车配方组合形式:


胶桶金属垫片




胶簧

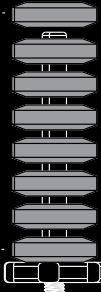

胶桶垫片

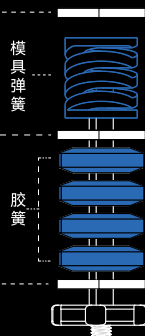

胶桶垫片

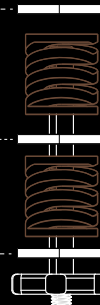

模具弹簧

车型

① 胶簧搭配

② 弹簧搭配

GT3



注: 建议使用压感传感器

GT4



注: 建议使用压感传感器

F4



注: 建议使用压感传感器

TCR



注: 建议使用压感传感器

运动
车型



注: 建议使用角度传感器

拉力



注: 建议使用压感传感器

硬度排序: 黑→灰→蓝→红 (由软到硬)



70R



80R



80P



90P

(P—聚氨酯 Polyurethane R—橡胶 Rubber)

硬度排序: 黄→蓝→红→绿→棕 (由软到硬)



黄色弹簧



蓝色弹簧



红色弹簧



绿色弹簧



棕色弹簧


Assembly Instruction

P1000

-  Die Spring *10
-  Rubber Cylinder: Support Washer *3
-  Restrictor*3
-  80 Rubber*6
-  80 Polyurethane*7
-  90 Polyurethane*7


-  Cylinder Metal Washers*1
(Included with the product, This kit doesn't contain any)

3 Types of Brake Stacks

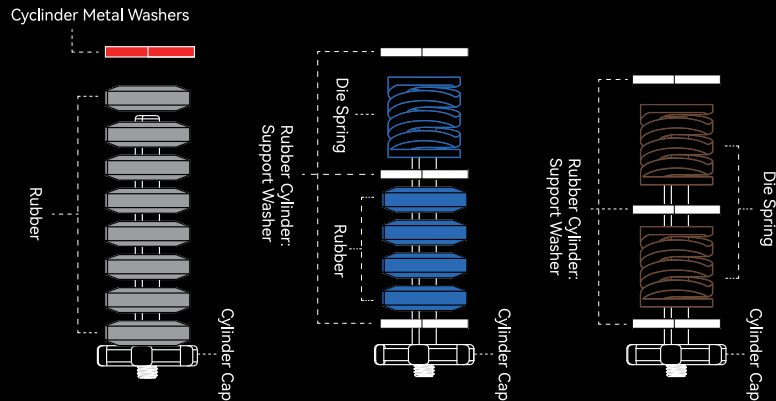

Vehicle Type	① Rubber Pad Recommendation	② Springs Recommendation
GT3	 4  4 Note: Select Loadcell sensor	 1  1  3
GT4	 2  3  3 Note: Select Loadcell sensor	 1  1  3
F4	 8 Note: Select Loadcell sensor	 2  3
TCR	 3  3  2 Note: Select Loadcell sensor	 2  3
For Sports Cars	 8(Soft) /  8(Hard) Note: Select Angle sensor	 4  1  3 Note: Select Angle sensor
Rally	 2  3  3 Note: Select Loadcell sensor	 1  1  3

Hardness: Black→Grey→Blue→Red
(From soft to hard)

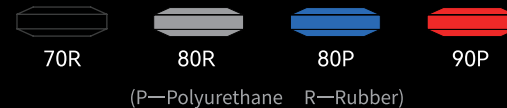

Hardness: Yellow→Blue→Red→Green→Brown
(In order from Soft to hard)

