

1.0 配件清单

盘头螺钉 M4-10*6

大线卡*2

六角扳手*1 (2.5mm)

2.0 安装

使用螺钉将支架固定在踏板上



放上P-HPR Neo, 使用螺钉将P-HPR Neo固定在支架上, 插入对应接口



1.0 List of accessories


Pan Head Screw (M4-10)*6

Cable Clip*2

Allen Key*1 (2.5mm)

2.0 Installation

Secure the support with screws

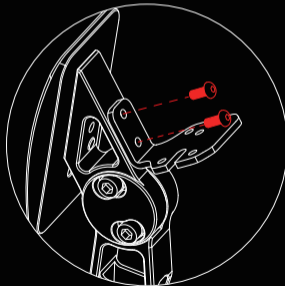

Place the P-HPR Neo and secure the P-HPR Neo on the support with screws, and insert to its corresponding sockets

